



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **1/26**

BACKBAR COOLER

WN-150	_____	☐
WN-250	_____	☐
WN-350	_____	☐
BBC-150	_____	☐
BBC-250	_____	☐
BBC-350	_____	☐
BBCS-250	_____	☐
BBCS-350	_____	☐
SBC-150	_____	☐
SBC-250	_____	☐
SBC-350	_____	☐
SBCS-250	_____	☐
SBCS-350	_____	☐



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE

Document No	KK-01
Revision Date	31.10.2024
Revision No	01
Page	2/26

USER AND MAINTENANCE MANUAL

Dear User,

Thank you for choosing our product and trusting our company. Our device is manufactured in accordance with international standards.

To achieve the expected efficiency from the device and use it for a long time, please make sure to read and ensure that the user reads this manual.

Before calling our service, please consider the following warnings.

- Please carefully read this manual before installing and using the machine and ensure that those who use the device also read it. Any problem arising from not reading the manual will be out of warranty.
- The manual, which contains information about the installation, use, and maintenance of the product you have purchased, should be read carefully. The electrical installation to which the device will be connected should be done by qualified personnel in accordance with legal regulations. No installation service is provided for our products.
- For any doubts or uncertainties, please contact the nearest authorized service by phone.
- We wish you the best efficiency from our products.



In the places where the machine will be connected, such as buildings or facilities, the electrical installation must comply with the "ELECTRICAL INTERIOR INSTALLATIONS" regulation published in the Official Gazette dated 4/11/1984 and numbered 18565, and all necessary precautions must be taken to ensure safety of life and property.

OUR COMPANY WILL NOT ACCEPT ANY RESPONSIBILITY OTHERWISE.



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE

Document No	KK-01
Revision Date	31.10.2024
Revision No	01
Page	3/26

1. Information About the Manufacturer:

Senox Industrial Hot and Cold Kitchen and Factory products are wholesaled, and we are pleased to offer you our new product groups by following the innovations around the world.

Our company, which strengthens its production, marketing, human resources, and storage areas, has started exporting and marketing part of its production to different countries through strategic partnerships.

Our company, which operates with companies specializing in its sector both abroad and domestically, has maintained its market share at targeted levels so far and will continue to do so.

HEADQUARTERS – FACTORY

Company Name : SENOX INDUSTRIAL KITCHEN IND.TRD.LTD.COMPANY.
Company Address : SASALI NEIGHBOUR. 46 STREET NO:18 CIGLI-İZMİR
Phone : +90(232) 457 47 78
Fax : +90(232) 457 47 78
E-Mail : info@senox.com.tr
Web : www.senox.com.tr

YETKİLİ SERVİS

Company Name : SENOX INDUSTRIAL KITCHEN SAN.TIC.LTD.STİ.
Company Address : SASALI MAH. 46 SOKAK NO:18 ÇİĞLİ-İZMİR
Phone : +90(232) 457 47 78
Fax : +90(232) 457 47 78
E-Mail : info@senox.com.tr
Web : www.senox.com.tr



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE

Document No	KK-01
Revision Date	31.10.2024
Revision No	01
Page	4/26

2. Product Information

Product Name : UNDER-COUNTER BOTTLE COOLER

**Models Hinged : BBC-150, BBC-250, BBC-350, SBC-150, SBC-250, SBC-350,
WN-150, WN-250, WN-350**

Models Sliding : BBCS-250, BBCS-350, SBCS-250, SBCS-350

Features and Benefits:

Usage Areas:

- Touristic Facilities
- Restaurants and Kitchens

Usage Characteristics:

- Hinged/Sliding Door
- Easy to Use
- Single-phase (220-230 Volt 50 Hz)
- PVC-coated galvanized sheet
- CFC-Free refrigerant gas R 600a
- External ambient temperature +30°C
- Fan cooling
- Digital / Analog thermostat
- Automatic defrost
- Door lock (Hinged)
- Special door hinge system
- Cleanable and removable magnetic door gasket
- Suitable for health
- Elegant and aesthetic appearance
- Easy to clean
- All parts are guaranteed by service



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE


Document No **KK-01**

Revision Date **31.10.2024**


Revision No **01**

Page **5/26**


BBC-150 / SBC-150 / WN-150

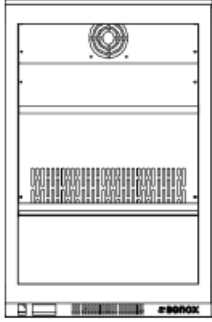

BBC-250 / SBC-250 / WN-250

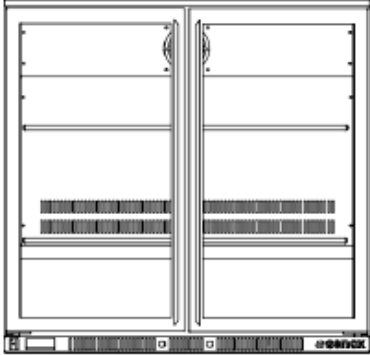

BBC-350 / SBC-350 / WN-350

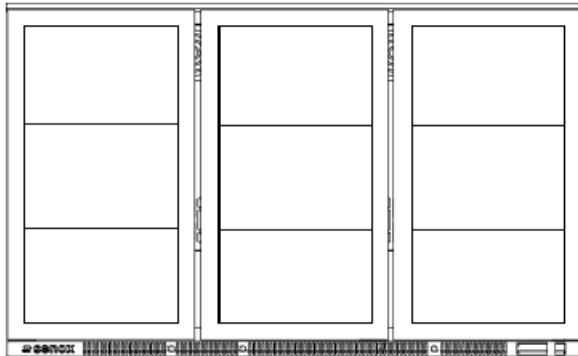



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **6/26**

Models and Specifications:

MODEL	BBC-150/SBC-150 /WN-150	BBC-250/BBCS-250 /SBC-250/SBCS-250 /WN-250	BBC-350/BBCS-350 /SBC-350/SBCS-350 /WN-350
Capacity (L)	135 LT	235 LT	335 LT
Dimensions (mm) (W x D x H)	605 505 850	900 505 850	1350 505 850
Refrigerant Gas	R600a 	R600a 	R600a 
Cooling Temperature (°C)	+2° /+5°C	+2° /+5°C	+2° /+5°C
Power (W)	149	149	149
Electrical Supply (V/Hz)	220-240V AC NPE-/50Hz	220-240V AC NPE-/50Hz	220-240V AC NPE-/50Hz
Fuse Current (A)	2	2	2
Maximum Tilt	5°	5°	5°
Class	1	1	1
Protection Class	IP 21	IP 21	IP 21
Weight (kg)	45/45/46	58/52/58/52/59	79/68/79/68/80



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE


Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **7/26**

4. Spare Parts List

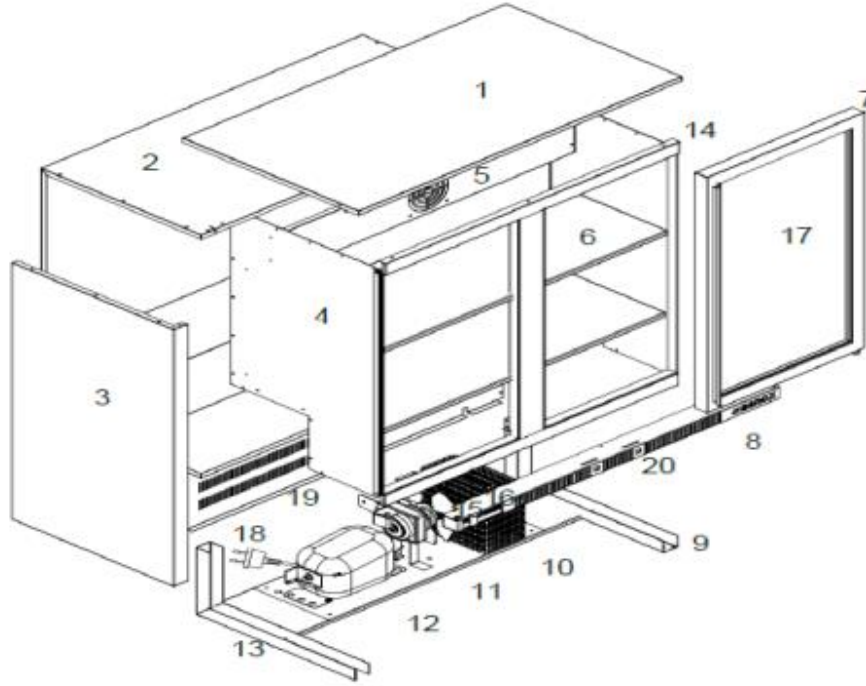

1-Top Cover
2- Rear Sheet
3-Side Sheet
4- Internal Boiler
5-Fan
6-Inner Shelf
7- Door

8- Canopy
9- Engine Support Sheet
10- Condenser
11- Fan Engine
12- Compressor
13- Engine Sheet
14- Plastic Gasket

15- On/off Switch
16- Digital Thermostat
17- Heat Glass
18- Electric Plug
19- Rear Shutter
20- Door Lock



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNCTION AND USER GUIDE


Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **8/26**

5. ELECTRICAL CIRCUIT DIAGRAM

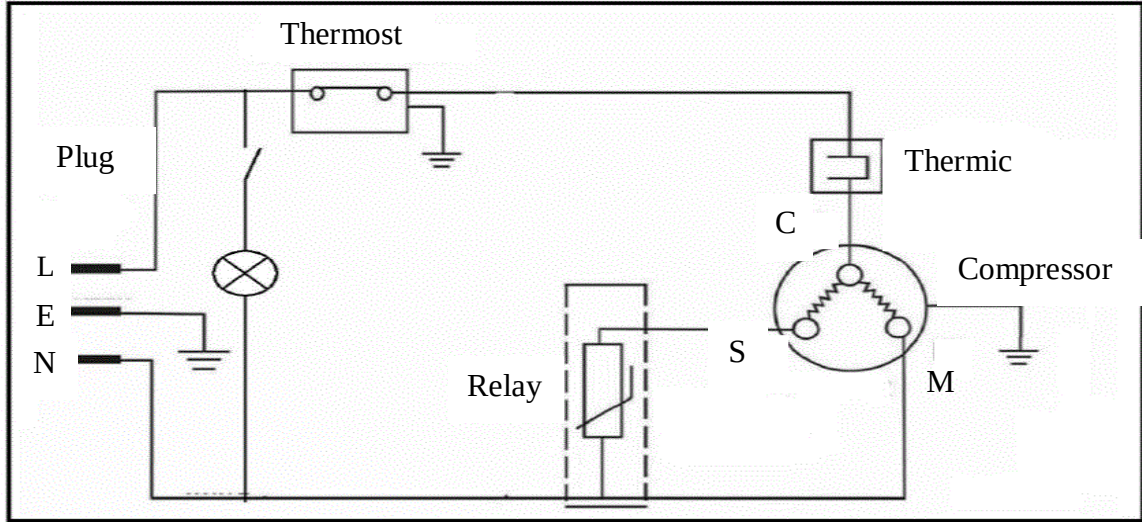

6. Warning and Notices

BİLGİ İKAZ ve UYARI ETİKETLERİ

INFORMATION, WARNING and NOTICE LABELS

SIRA NO ROW NO	ETİKET LABEL	AÇIKLAMASI	
		TÜRKÇE TURKISH	İNGİLİZCE ENGLISH
01		SON KONTROL	FINAL CONTROL
02		DİKKAT ELEKTRİK ÇARPMA RİSKİ	RİSK OF ELECTRIC SHOCK



SENOX

KULLANMA VE BAKIM KILAVUZU MALFUNCTION AND USER GUIDE


Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **9/26**

7. Product Transportation and Relocation

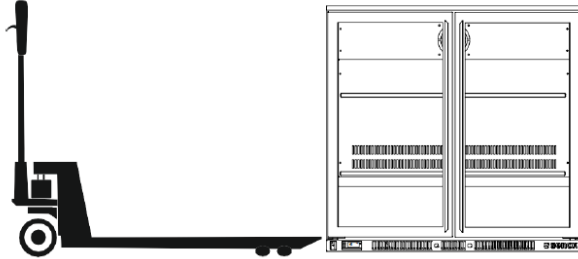

- The device should be placed on a pallet using a forklift or a pallet truck.
- The carriers of the forklift or pallet truck should be balanced under the pallet to move the device.
- If the transportation distance is long, move slowly and, if necessary, fix the device to the pallet to prevent shaking or have someone keep its balance.

8. Product Installation

For the connection and installation of the product, please contact an authorized service. Any damage that may occur during the connection and installation by someone other than the authorized service will not be covered by the warranty.

- Before installing the device, remove the protective film layer if there is any.
- Ensure that the device is level according to the slope of the ground. Do not leave any gaps to prevent vibration.
- After placing the transported device in its intended location, wait at least 6 hours before operating it. This is necessary for the compressor oil to return to the system after transportation.
- In case of sudden power outages or plugging and unplugging the power plug, the protective thermal switch of the compressor will trip as the gas pressure in the cooling systems has not yet balanced. The device will start working normally after 4-5 minutes.
- The electrical connection of the device should be checked by a qualified electrician and connected to a fuse at a height of 170 cm from the ground. The electrical connection should be made with a 30mA leakage current protection fuse to prevent the danger of electric shock.
- The electrical installation of the device should be connected to the grounding busbar in the nearest panel to ensure grounding.
- In case of malfunction, do not interfere with the device and contact the manufacturer or authorized service.
- Make sure that during installation, device should have gap between surface and around. Recommended gap sizes are 5cm from top cover, 15cm gap from side sheet and 10 cm gap rear sheet.



SENOX

KULLANMA VE BAKIM KILAVUZU MALFUNTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **10/26**

9. Operating Instructions

- Do not expose the device to direct sunlight. It should be at least 40 cm away from heat sources such as stoves, ovens, and radiators.
- Our devices can be used side by side with other products from the same series.
- The device is intended for industrial use and should only be used by personnel who have received training on the device.
- Plug the power plug into a grounded outlet.
- Set the thermostat knob to the desired temperature.
- Turn on the device using the on/off switch.



In case of any fire or flame flash in the area where the device is used, calmly close the gas valves and electrical switches (if any) and use a fire extinguisher. Never use water to extinguish flames.



Place the device with its back against the wall, ensuring a 150 mm (15 cm) space between the wall and the cooler. In any setup, the most important point to pay attention to is not obstructing the ventilation of the compressor group. Place and operate your product on its feet or wheels without exposing it to any slope.

10. Manuel Thermostat



250V-50hz-6A

Cold out +1,5 C

Cold in +5,5 C

Warm in +12,5 C

Capillary 1200mm



SENEX

KULLANMA VE BAKIM KILAVUZU MALFUNCTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **11/26**

11. Maintenance Instructions

- Before cleaning the machine, always disconnect it from the electrical supply.
- Place the products inside your cooler in a suitable cool place to maintain their temperature.
- Before cleaning, wait for the interior parts of your product to reach room temperature.
- Always wear protective gloves during cleaning and maintenance. This will protect you from injuries.
- Remove accessory parts from inside.
- Clean the machine with a soft sponge and without using abrasive chemicals.
- Ensure there are no wet or damp areas inside after cleaning.
- Do not clean and maintain with high-pressure water or by pouring water.
- Always consider the warning and caution labels on the device.
- After operating your product according to the instructions in this manual, you can reload your products after 2 hours.

12. Malfunctions and Their Causes

Do not interfere with the machine in case of electrical and other malfunctions; immediately contact technical service. Do not perform any interventions until the technical service arrives.

<i>Possible Malfunction</i>	<i>Cause</i>	<i>Solution</i>
The machine does not work	No electricity	Check the main fuse
The cooler is not working (no sound or only fan sound)	The thermostat might be active. The plug is not properly inserted. The fuse is blown or faulty. The condenser fins are clogged and dirty.	The cooler will start working again when it reaches the appropriate temperature. Insert the plug properly. Contact SENEX authorized service or a qualified electrician. Clean the condenser fins.
The internal temperature of the device is high	External ambient temperature is very high or thermostat setting is incorrect. Too close to the rear wall, ventilation grilles are clogged or blocked. Exposed to excessive external wind. The condenser fins are very dirty.	Move the cooler to a place with a lower external temperature. Maintain the specified gap. Clean the ventilation grilles. Shield from wind. Clean the condenser fins.
The internal temperature of the device is very low	Incorrect internal thermostat setting	Reset the thermostat.



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **12/26**

13. Warranty

The SENOX branded UNDER-COUNTER BOTTLE COOLER you purchased has passed the necessary quality control tests before leaving the factory.

If any part is defective or damaged, please return it immediately with the original package. The device is under a 1-year manufacturer warranty against manufacturing defects from the date of purchase.

Non-Warranty Items

- *LED lights are not covered by the warranty.*
- *Glass fogging due to the use of the product in a bar counter environment is not covered by the warranty.*
- *Digital thermostat failures due to water contact or impact caused by user-related issues in a bar counter environment are not covered by the warranty*



SENOX ENDÜSTRİYEL MUTFAK SAN. TİC. LTD. ŞTİ.



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE

Document No	KK-01
Revision Date	31.10.2024
Revision No	01
Page	13/26

WARRANTY CERTIFICATE

The use of this certificate is authorized by the Ministry of Industry and Trade of the Republic of Turkey in accordance with the Consumer Protection Law No. 4077 and the Warranty Certificate Implementation Principles Regulation.

Certificate No :
Certificate Issuance Date :

Manufacturer : SENOX INDUSTRIAL KITCHEN SAN.TIC.LTD.STI.
Address : SASALI MAH. 46 SOKAK NO:18 ÇİĞLİ-İZMİR
Phone : +90(232) 457 47 78
Fax : +90(232) 457 47 78
Web & E-Mail : www.senox.com.tr - info@senox.com.tr

PRODUCT INFORMATION

Type : UNDER-COUNTER BOTTLE COOLER
Brand : SENOX
Model : BBC-...
Serial No :
Production Date :
Warranty Period : One (1) Year
Maximum Repair Period : Twenty (20) Business Days

SELLER INFORMATION

Title :
Address :
Phone/Fax :
Invoice No/Date :
Stamp/Signature :

First Operation Date :
Service Stamp/Signature :

Please keep the service form and documents showing the service provided by the authorized service on the device.



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **14/26**

BAR ALTI ŞİŞE SOĞUTUCU

WN-150	_____	☐
WN-250	_____	☐
WN-350	_____	☐
BBC-150	_____	☐
BBC-250	_____	☐
BBC-350	_____	☐
BBCS-250	_____	☐
BBCS-350	_____	☐
SBC-150	_____	☐
SBC-250	_____	☐
SBC-350	_____	☐
SBCS-250	_____	☐
SBCS-350	_____	☐



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNCTION AND USER GUIDE

Document No KK-01

Revision Date 31.10.2024

Revision No 01

Page 15/26

KULLANIM VE BAKIM KILAVUZU

Sayın kullanıcımız;

Cihazımızı tercih ettiğiniz ve firmamıza olan güveniniz için teşekkür ediyoruz.

Cihazımız uluslararası standartlara uygun olarak üretilmiştir.

Cihazdan beklentinize uygun verim alabilmeniz ve uzun süreli kullanmanız için kullanma kılavuzunu kesinlikle okumanızı, kullanıcınıza okutmanızı önemle hatırlatırız.

Servisimizi çağırmadan önce aşağıdaki uyarıları dikkate almanızı rica ediyoruz.

- Elinizdeki kılavuzu lütfen makineyi kurmadan ve kullanmadan önce dikkatle okuyunuz, cihazı kullananların okumasını sağlayınız. Kılavuzu okumadan makineyi çalıştırdığınızda oluşacak herhangi bir sorunda cihaz garanti kapsamı dışında kalacaktır.
- Satın aldığınız ürünümüzün montajı, kullanılması ve bakımı ile ilgili bilgileri içeren kılavuz dikkatle okunmalıdır. Cihazın bağlantısının yapılacağı elektrik tesisatının yasal mevzuatlara uygun şekilde ehliyetli elemanlarca yapılmalıdır. Ürünlerimizde montaj hizmeti verilmemektedir.
- Tereddüt ettiğiniz ve anlayamadığınız hususlar için size en yakın yetkili servisten telefonla bilgi isteyiniz.
- Ürünlerimizden en iyi verimi almanızı temenni ederiz



Makinanın bağlanacağı bina, tesis ve benzeri yerlerde 4/11/1984 Tarih ve 18565 Sayılı resmî gazetede yayınlanan “ELEKTRİK İÇ TESİSLERİ” yönetmeliğine uygun bir tesisat olmalı ve can ve mal güvenliğinin sağlanması için gerekli her türlü önlem alınmalıdır.

AKSİ DURUMLARDA FİRMAMIZ SORUMLULUK KABUL ETMEYECEKTİR.



SENOX
KULLANMA VE BAKIM KILAVUZU
MAINFUNTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **16/26**

1. Üretici Hakkında Bilgiler:

Senox Endüstriyel Sıcak, Soğuk Mutfak ve Fabrika ürünlerinin toptan satışlarının yanı sıra dünyadaki yenilikleri takip ederek, sizlere daha yeni ürün gruplarımızı sunmaktan mutluluk duyuyoruz.

Üretim, pazarlama, insan kaynakları ve depolama alanlarını güçlendiren şirketimiz, stratejik ortaklık kurarak üretiminin bir kısmını farklı ülkelere ihraç etmeye ve pazarlamaya başlamıştır.

Yurtdışında ve Yurtiçinde kendi sektöründe uzmanlaşmış şirketler ile faaliyet gösteren Şirketimiz bugüne kadar pazar payını hedeflediği oranlarda tutmuştur ve bundan sonra da devam edecektir.

MERKEZ - FABRİKA

Firma Adı : SENOX ENDÜSTRİYEL MUTFAK SAN.TİC.LTD. ŞTİ.
Firma Adresi : SASALI MAH. 46 SOKAK NO:18 ÇİĞLİ-İZMİR
Telefon : +90(232) 457 47 78
Faks : +90(232) 457 47 78
E-Mail : info@senox.com.tr
Web : www.senox.com.tr

YETKİLİ SERVİS

Firma Adı : SENOX ENDÜSTRİYEL MUTFAK SAN.TİC.LTD. ŞTİ.
Firma Adresi : SASALI MAH. 46 SOKAK NO:18 ÇİĞLİ-İZMİR
Telefon : +90(232) 457 47 78
Faks : +90(232) 457 47 78
E-Mail : info@senox.com.tr
Web : www.senox.com.tr



SENOX
KULLANMA VE BAKIM KILAVUZU
MAFUNTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **17/26**

2. Ürün Hakkında Bilgiler

Ürün Adı: BAR ALTI ŞİŞE SOĞUTUCU

**Modeller Çarpma: BBC-150, BBC-250, BBC-350, SBC-150, SBC-250, SBC-350,
WN-150, WN-250, WN-350**

Modeller Sürgü: BBCS-250, BBCS-350, SBCS-250, SBCS-350

Kullanım Alanları:

Turistik Tesisler, Restoranlar ve Mutfaklar

Kullanım Özellikleri:

- Çarpma/ Sürgü Kapı
- Basit Kullanıma sahip
- Monofaze (220-230 Volt 50 Hz)
- Elektrostatik toz boya kaplı galvaniz sac.
- CFC Free soğutma gazı R 600a
- Dış ortam sıcaklığı -5 C / +30 C
- Fanlı soğutma
- Dijital termometre & termostat.
- Otomatik defrost.
- Kapılarda kilit (Çarpma)
- Özel kapı menteşe sistemi.
- Temizlenebilir ve sökülebilir manyetik kapı contası.
- Sağlığa uygundur
- Şık ve estetik görünüm
- Kolay temizleme
- Tüm parçalar servis garantilidir.



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE


Document No **KK-01**

Revision Date **31.10.2024**


Revision No **01**

Page **18/26**


BBC-150 / SBC-150 / WN-150

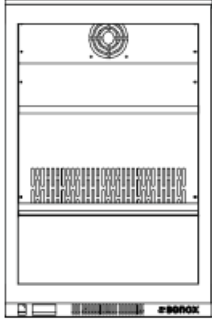

BBC-250 / SBC-250 / WN-250

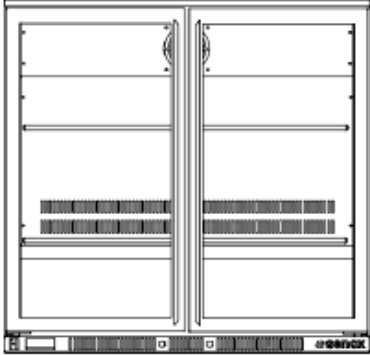

BBC-350 / SBC-350 / WN-350

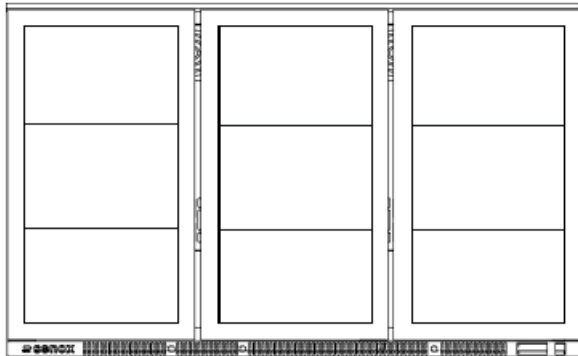



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **19/26**

3. Modeller ve Özellikleri:

MODEL	BBC-150/SBC-150 /WN-150	BBC-250/BBCS-250 /SBC-250/SBCS-250 /WN-250	BBC-350/BBCS-350 /SBC-350/SBCS-350 /WN-350
KAPASİTE	135 LT	235 LT	335 LT
ÖLÇÜLER (mm)	605 505 850	900 505 850	1350 505 850
SOĞUTUCU GAZ	R600a 	R600a 	R600a 
SOĞUTMA DERECESİ (°C)	+2° /+5°C	+2° /+5°C	+2° /+5°C
GÜÇ (W)	149	149	149
ELEKTRİK BESLEMESİ (V/Hz)	220-240V AC NPE-/50Hz	220-240V AC NPE-/50Hz	220-240V AC NPE-/50Hz
SİGORTA AKIMI (A)	2	2	2
MAXİMUM EĞİM	5°	5°	5°
SINIFI	1	1	1
KORUMA SINIFI	IP 21	IP 21	IP 21
AĞIRLIK (KG)	45/45/46	58/52/58/52/59	79/68/79/68/80



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNCTION AND USER GUIDE


Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **20/26**

4. Cihazın Parçaları

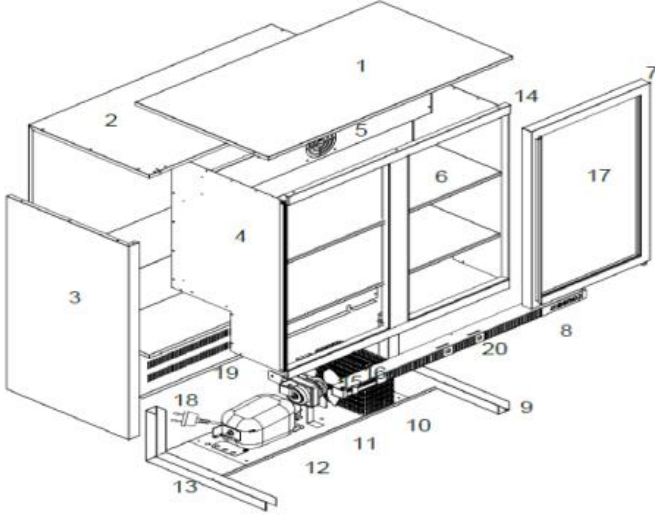

1-Üst kapak
2-Arka sac
3-Yan sac
4-İç kazan
5-Fan
6-İç raf
7-Kapı

8- Kanopi
9- Motor Destek Sacı
10- Kondenser
11- Fan Motoru
12-Kompresör
13- Motor Sacı
14- Plastik Conta

15- Aç/Kapa Anahtarı
16- Dijital Termostat
17- Isı Cam
18- Elektrik Fişi
19- Arka Panjur
20- Kapı Kilidi



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNTION AND USER GUIDE


Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **21/26**

5. ELEKTRİK DEVRE ŞEMASI

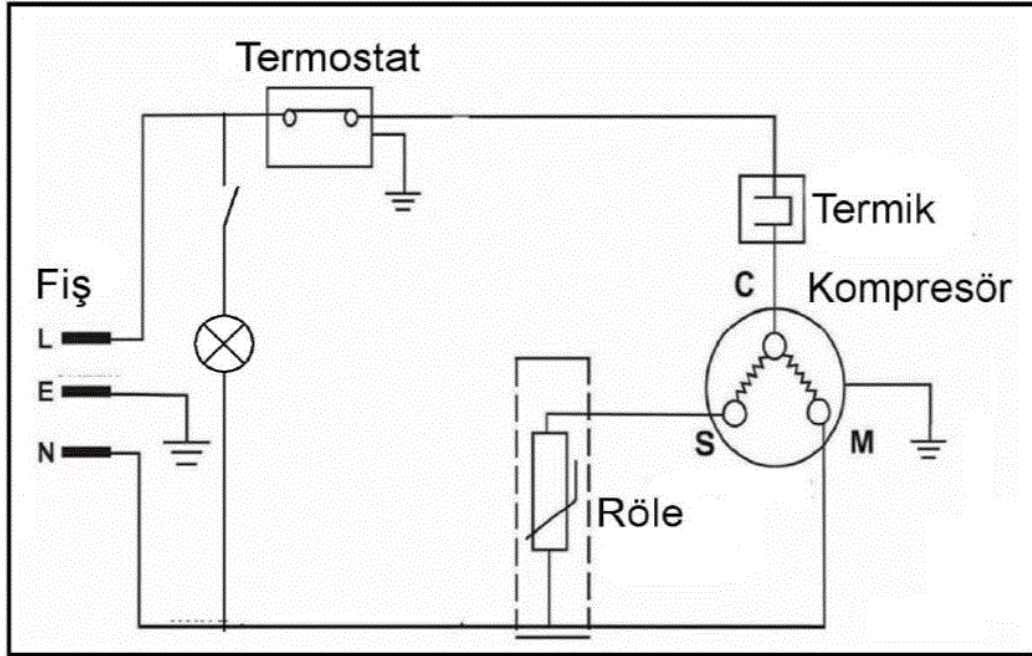

6. Uyarı ve İşaretlemeler

BİLGİ İKAZ ve UYARI ETİKETLERİ
INFORMATION, WARNING and NOTICE LABELS

SIRA NO ROW NO	ETİKET LABEL	AÇIKLAMASI	
		TÜRKÇE TURKISH	İNGİLİZCE ENGLISH
01		SON KONTROL	FINAL CONTROL
02		DİKKAT ELEKTRİK ÇARPMA RİSKİ	WARNING OF ELECTRICAL SHOCK



SENOX

KULLANMA VE BAKIM KILAVUZU

MAINTENANCE AND USER GUIDE


Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **22/26**

7. Ürünün Taşıma ve Yer Değiştirme

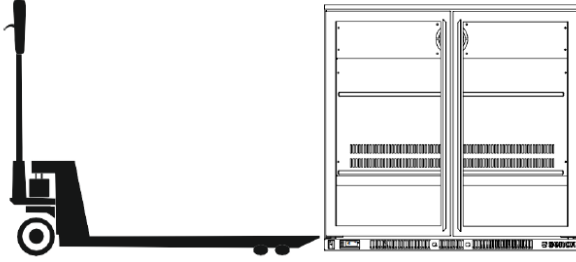

- Cihaz transpalet ya da forklift gibi yardımcı bir araçla palet üzerine yerleştirilmelidir.
- Forklift ya da transpalet taşıyıcıları paletin altına dengeli bir şekilde yerleştirilerek cihaz taşınır.
- Taşıma mesafesinin uzak olması durumunda yavaş hareket edilmeli gerekirse sallantılara karşı cihaz palete sabitlenmeli veya bir kişi tarafından dengesi korunmalıdır.

8. Ürünün Kurulumu

Ürünün bağlantı ve montajının yapılabilmesi için yetkili servise başvurunuz. Yetkili servis dışında yapılan bağlantı ve montaj sırasında oluşabilecek hasarlar garanti kapsamı dışında tutulacaktır.

- Cihazın montajından önce, varsa üzerindeki koruyucu film tabakası sökülmelidir.
- Cihazın, yer eğimine göre terazi düzleminde olmasını sağlayınız. Boşluk bırakmayınız, titreşimin önüne geçiniz.
- Nakliyesi yapılan cihazın kullanılacağı yere yerleştikten sonra en az 6 saat çalıştırmadan bekletiniz. Çünkü taşıma esnasında sisteme giden kompresör yağı tekrar geri dönmelidir.
- Ani elektrik kesilmelerinde veya fişi prize takıp çıkarmalarında soğutma sistemlerindeki gazın basıncı henüz dengelenmemiş olduğu için kompresör koruyucu termiği atar. 4-5 dakika sonra cihaz normal çalışmaya başlayacaktır.
- Cihazın elektrik bağlantısı ehliyetli bir elektrikçi tarafından kontrol edilmeli yerden 170cm yükseklikteki sigortaya bağlanmalıdır. Elektrik bağlantısı, kaçak akım tehlikesine karşı besleme sigortasına 30mA lik kaçak akım sigortası konularak yapılmalıdır.
- Cihazın elektrik tesisatının en yakın panodaki topraklama barasına bağlanarak topraklanması sağlanmaktadır.
- Arıza durumunda üreticinin veya yetkili servisin dışında cihaza müdahale edilmemelidir.
- Cihazın montaj edileceği yerden, üstten minimum 5cm, yandan minimum 15cm arkada minimum 10cm boşluk bırakılmalıdır.



SENOX

KULLANMA VE BAKIM KILAVUZU

MAFUNTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **23/26**

9. Kullanma Talimatı

- Cihaz, direkt güneş ışığına maruz bırakılmamalıdır. Ocak, fırın, kalorifer peteği ve soba gibi ısı kaynaklarından en az 40 cm uzakta olmalıdır.
- Cihazlarımızın aynı serideki diğer ürünlerimizle beraber yan yana kullanabilirsiniz.
- Cihaz endüstriyel kullanım amaçlı yapılmış olup sadece cihazla ilgili eğitim almış elemanlar tarafından kullanılmalıdır.
- Fişi topraklı prize takınız.
- Termostat düğmesini istediğiniz dereceye getiriniz.
- Cihazın on/of şalterini açınız.



Cihazın kullanıldığı alanda herhangi bir sebeple yangın alev parlaması gibi durumlarda paniklemeden (varsa) gaz vanalarını ve elektrik şalterlerini kapatarak yangın söndürücü kullanınız. Alev söndürmek için asla su kullanmayınız.



Tek başına sırtı duvara gelecek şekilde; duvar ile soğutucunuz arasında 150 mm (15 cm) olmasına özen gösteriniz. Her türlü yerleştirmede dikkat edilmesi gereken en önemli nokta kompresör grubu havalandırmasının engellenmemesidir. Ürününüzü herhangi bir eğime maruz bırakmaksızın, ayaklarının veya tekerleklerinin üzerinde olacak şekilde yerleştiriniz ve çalıştırınız

10. Manuel Termostat



250V-50hz-6A

Cold out +1,5 C

Cold in +5,5 C

Warm in +12,5 C

Capillary 1200mm



SENOX
KULLANMA VE BAKIM KILAVUZU
MAINFUNTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **24/26**

11. Bakım Talimatları

- Makinenin temizliğini yapmadan önce mutlaka elektrikle bağlantısını kesiniz.
- Ürününüz içerisinde bulunan ürünleri, sıcaklığını muhafaza edecek uygun serin bir ortama bırakınız.
- İç temizlik öncesi ürününüzün iç kısımlarının ortam sıcaklığına gelmesini bekleyiniz
- Temizleme ve bakım sırasında mutlaka koruma eldivenini giyiniz. Bu sizi yaralanmalardan koruyacaktır.
- Aksesuar parçalarını içinden çıkarınız.
- Makinenin gerekli temizliğini yumuşak sünger ve aşındırıcı kimyasal kullanmadan yapınız.
- Temizlikten sonra iç kısımda ıslak veya nemli bir bölgenin kalmadığına emin olunuz.
- Basınçlı Su veya dökme suyla temizlik ve bakım yapmayınız.
- Cihaz üzerindeki ikaz ve uyarıcı etiketleri mutlaka dikkate alınız.
- Ürününüzü bu kılavuzda belirtilen çalıştırma şekline göre çalıştırdıktan 2 saat sonra ürünlerinizi tekrar geri yükleyebilirsiniz.

12. Arıza ve Sebebi

Elektrik ve diğer arızalarda makineye müdahale etmeyiniz ve derhal teknik servise başvurunuz. Teknik servis gelinceye kadar makineye herhangi bir müdahalede bulunmayınız.

OLASI ARIZA	SEBEBİ	ÇÖZÜMÜ
Makinenin çalışmaması	Elektrik gelmemesi	Ana sigortanın kontrol edilmesi
Soğutucu çalışmıyor ise. (Cihazda hiç ses yok veya sadece fan sesi var)	Termostat yapmış olabilir. Fişi takılı değildir. Sigorta atmış veya bozulmuş olabilir. Kondanser lamelleri tıkanmış ve kirlenmiş olabilir.	Uygun sıcaklığa geldiğinde tekrar çalışacaktır. Fişi düzgün bir şekilde takınız. SENOX yetkili servisine veya ehliyetli bir elektrikçiye başvurunuz.
Cihaz iç sıcaklığı yüksek	Dış ortam sıcaklığı çok yüksek veya termostat ayarı yanlış. Arka duvara çok yakın havalandırma panjurları tıkalı veya önü kapalı. Aşırı derecede dış rüzgara maruz kalmış olabilir. Kondanser lamelleri çok kirlidir	Dış ortamın daha düşük olduğu bir yere soğutucuyu taşıyınız. Belirtilen boşluğa getiriniz. Havalandırma panjurlarının önünü temizleyin. Rüzgârı engelleyin. Kondanser lamellerini temizleyiniz
Cihaz içi sıcaklık çok düşük	Yanlış iç termostat ayarı	Termostatı tekrar ayarlayınız.



SENOX
KULLANMA VE BAKIM KILAVUZU
MAFUNTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **25/26**

13. Garanti

Almış olduğunuz SENOX Markalı BAR ALTI ŞİŞE SOĞUTUCU fabrikadan çıkmadan önce gerekli kalite kontrol testlerinden geçirilmiştir.

Eğer herhangi bir parça arızalı veya zarar görmüş çıkarsa hemen orijinal paketiyle geri gönderiniz. Cihazı satın almış olduğunuz tarihten itibaren üretim hatalarına karşı **1 (Bir) SENE** üretici firma garantisi vardır.

Garanti kapsamına girmeyen hususlar

- *Led aydınlatmalar garanti kapsamında değildir.*
- *Ürün baraltı kullanım amaçlı ve kullanıldığı alandan kaynaklı cam buharlanmaları garanti kapsamında değildir.*

Ürün baraltı kullanım amaçlı ve kullanıldığından kullanıcı kaynaklı su teması, darbe gibi sebeplerden oluşacak dijital termostat arızaları garanti kapsamında değildir



SENOX ENDÜSTRİYEL MUTFAK SAN. TİC. LTD. ŞTİ.



SENOX
KULLANMA VE BAKIM KILAVUZU
MALFUNCTION AND USER GUIDE

Document No **KK-01**

Revision Date **31.10.2024**

Revision No **01**

Page **26/26**

GARANTİ BELGESİ

Bu belgenin kullanılmasında, 4077 sayılı tüketicinin korunması hakkında kanun ve bu kanuna dayanarak yürürlüğe konulan garanti belgesi uygulama esaslarına dair yönetmeli uyarınca T.C. Sanayi ve Ticaret Bakanlığı İl Müdürlüğü tarafından izin verilmiştir.

Belge No :
Belge veriliş Tarihi :
İmalatçı Firma : SENOX ENDÜSTRİYEL MUTFAK SAN.TİC.LTD.ŞTİ.
Adres : SASALI MAH. 46 SOKAK NO:18 ÇİĞLİ-İZMİR
Telefon : +90(232) 457 47 78
Faks : +90(232) 457 47 78
Web & E-Mail : www.senox.com.tr - info@senox.com.tr

ÜRÜN BİLGİLERİ

Cinsi : BAR ALTI ŞİŞE SOĞUTUCU
Markası : SENOX
Model : BBC-.....
Seri No :
Üretim Tarihi :
Garanti Süresi : Bir (1) Yıl
Azami Tamir Süresi : Yirmi (20) İş Günü

SATICI FİRMA

Unvan :
Adres :
Tel/ Faks :
Fat.No / Tarih :
Kaşe / İmza :

İlk Çalıştırma Tarihi :
Servis Kaşe / İmza :

Yetkili servisin cihaz üzerinde yapmış olduğu servis hizmetini gösterir servis formu ve begelerini sürekli muhafaza ediniz.